


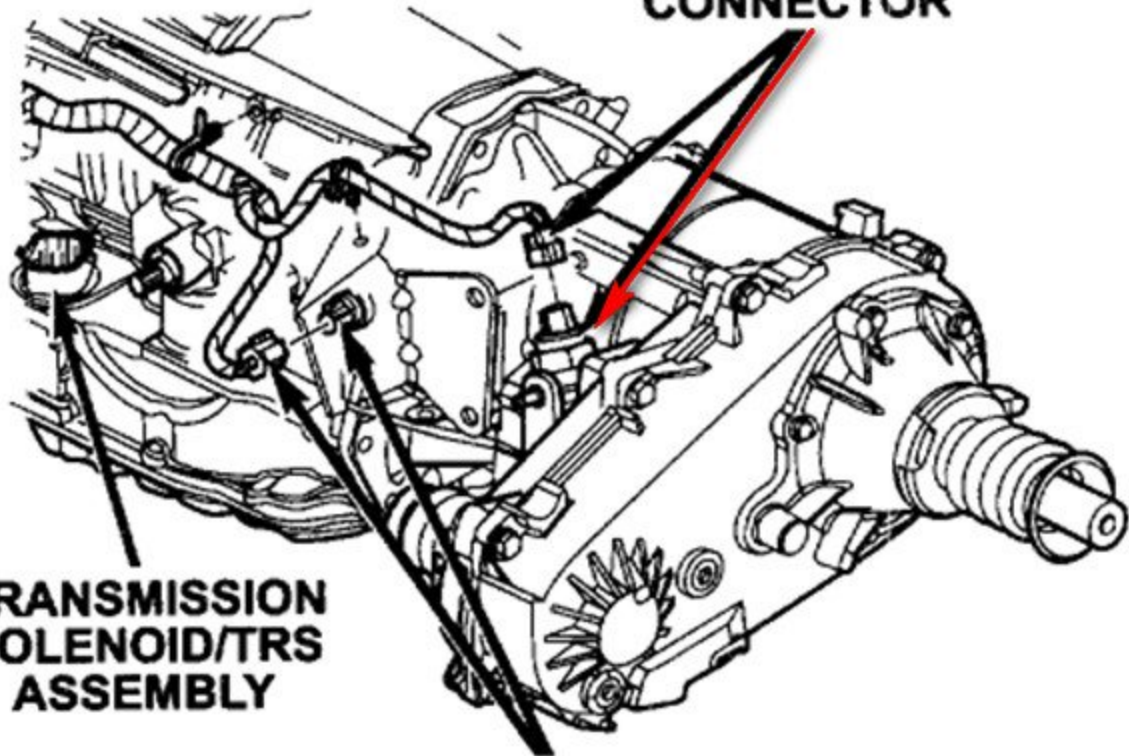

**TRANSFER CASE POSITION
SENSOR AND HARNESS
CONNECTOR**



**TRANSMISSION
SOLENOID/TRS
ASSEMBLY**

**OUTPUT SPEED SENSOR
AND HARNESS CONNECTOR**